




P.O. Box 846
Danville, IL 61834-0846

800-331-1164
IL-217-446-7900
FAX-217-443-2582


Insulation Hardware • Refractory Anchors • Adhesives • Stud Welding Equipment & Accessories

INSUL-ANCHORS APPLICATION

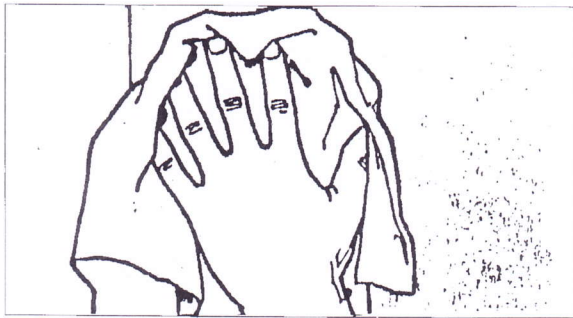

1. WIPE SURFACE CLEAN.

Anchor must be applied to a clean, dry, non-porous surface.

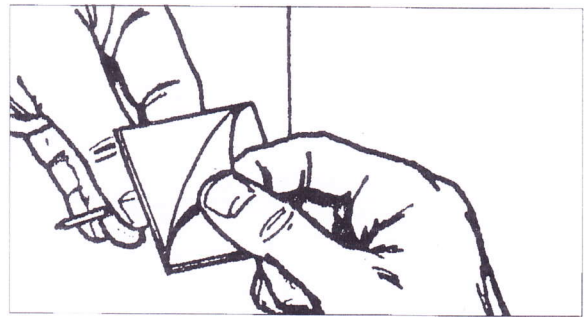


2. PEEL OFF RELEASE BACKING.

Double faced foam tape is 1/32 inch thick, with a one-year active shelf life.



3. STICK ANCHOR IN PLACE.

Select location before contact with surface.
Press firmly.

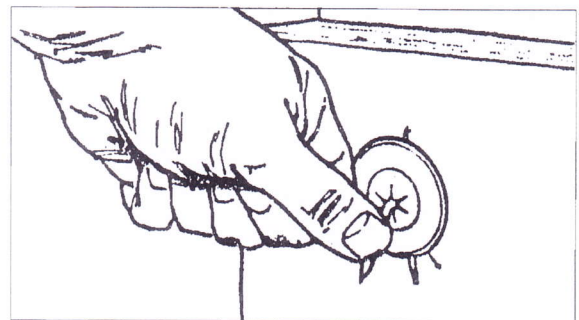

4. HANG INSULATION AND SECURE WITH WASHER.

Recommended loading 2 lbs. per anchor.
(1/2 lbs./sq. in. maximum)
Do not compress insulation when pressing on self locking washer.



Danville, IL 61834-0846

“PEEL & PRESS INSULATION HANGERS”

MANUFACTURER'S INSTALLATION INSTRUCTIONS READ CAREFULLY BEFORE USING THIS PRODUCT

WARNING!

DO NOT DEVIATE FROM THESE INSTRUCTIONS WHEN INSTALLING GEMCO “PEEL & PRESS” INSULATION HANGERS.

1 BEFORE USING, THE USER MUST TEST THIS PRODUCT TO DETERMINE ITS SUITABILITY FOR THEIR SPECIFIC APPLICATION.

GEMCO and its sales agent or its distributors have no control over the method of application, environmental or parent surface bonding conditions. Therefore, the user assumes all responsibility, risk and liability in connection with the use and application of this product. For application assistance information, call GEMCO toll free at **1-800-331-1164**...in IL, 217-446-7900.

2 WIPE PARENT SURFACE CLEAN.

All hangers must be applied to a clean, dry, non-porous, smooth surface that is completely free of contaminants such as dirt, dust, film, grease, oil, rust, salt, etc.

3 WHEN READY TO APPLY, PEEL OFF PROTECTIVE PAPER RELEASE BACKING.

The 1/32 inch thick double-coated foam tape has a one-year active shelf life from date of shipment when stored in shipping container at 72° F and 50% relative humidity. The continuous service temperature range of the pressure sensitive foam tape is from 0° F to *140° F.

4 SELECT HANGER LOCATION, POSITION HANGER ON ONE EDGE OF ITS BASE, THEN PRESS HANGER FIRMLY INTO PLACE.

For best results apply additional pressure around the base of the spindle.

Do not use any twisting motion during application.

Do not install when ambient temperature is below +45°F. Best results are obtained when ambient temperature is between +60°F and +120°F.

Hanger spacing should not exceed 12" on center.

Before installing insulation or other materials, test a few hangers at random to make certain that the bond is complete and that the hangers will develop full strength.

5 HANG INSULATION AND SECURE WITH GEMCO SELF-LOCKING WASHERS.

Hanger loading should not exceed 2 lbs. per hanger (1/2 lb. per square inch).

Do not compress insulation when installing self locking washer.

WARNING!

DO NOT USE ON ANY CONCRETES!
DO NOT USE ON ANY WOOD SURFACES!
DO NOT USE ON SINGLE-PLY ROOF DECKS!
DO NOT USE ON METAL BUILDINGS!
NOT GENERALLY RECOMMENDED
FOR USE ON PAINTED SURFACES
DO NOT USE ON ANY SURFACE WHERE THE REVERSE (OPPOSITE) SIDE MAY BE EXPOSED TO HEAT CONCENTRATIONS CAUSED BY SUNLIGHT, ETC., DIRECT OR OTHERWISE.

IMPORTANT NOTICE TO PURCHASER

All instructions, recommendations, statements and technical information contained herein are based on tests we believe to be reliable, but their accuracy and completeness are not guaranteed. Therefore, the following is made in lieu of all warranties, expressed or implied.

Seller's and manufacturer's only obligation shall be to replace such quantity of the product proved to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product.

Before using, user shall determine the suitability of the product for the intended use. Furthermore, user assumes all risk and liability whatsoever in connection therewith.

No statement or recommendation not contained herein shall have any force or effect unless in a written agreement signed by officers of the seller and manufacturer.